



### VERY IMPORTANT

Before connecting the controller to the track, make sure that the polarity of the track corresponds to that of the controller (positive polarity)

If you want to change the direction of rotation for the car on the track, you **ONLY** have to change the connections on the track rails. **NEVER** on the Power Supply because the electronic controllers may suffer irreparable damage.

